


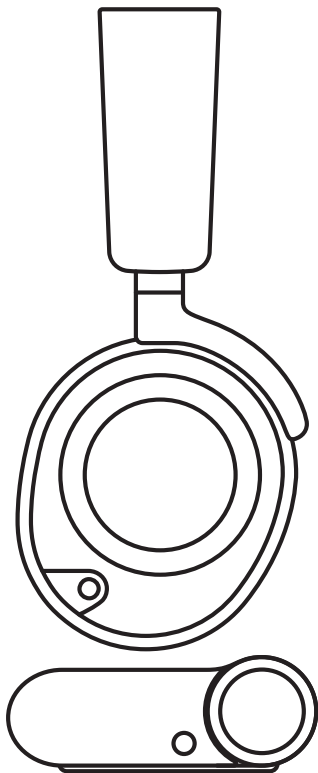

ARCTIS NOVA PRO WIRELESS

PRODUCT INFORMATION GUIDE

TABLE OF CONTENTS

Table of Contents	2
General	3
Product Overview	5
Setup	6
Functions	7
Power on/off	8
Pairing	8
Bluetooth	9
Base Station Operation	10
Audio Options	11
Audio Output Settings	12
Active Noise Cancellation	13
Microphone	14
Perfect Fit	15
Speaker Plates	16
Translations	18
Español	21
Français	24
Italiano	27
Polski	30
Português	33
日本語	36
简体中文	39
繁體中文	41
한국어	44
Regulatory	48

GENERAL


PACKAGE CONTENTS

- Arctis Nova Pro Wireless Headset
- Wireless Base Station
- Second Battery
- USB-C to USB-A Cable

SYSTEM COMPATIBILITY

- PC
- PlayStation 5, PlayStation 4
- Nintendo Switch (TV Mode)
- Mobile (with USB-C)
- Mac

SOFTWARE

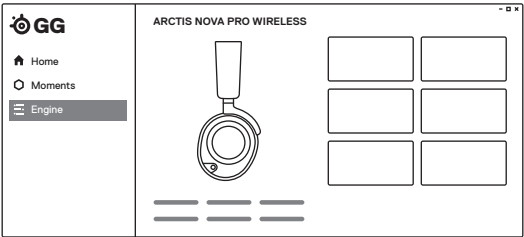

Use Engine inside SteelSeries GG to set custom equalizer settings and control your mic.

GG also has other amazing apps like Sonar, a breakthrough in gaming sound, that allows you to hear what matters most, through cutting-edge audio tools.


 **DOWNLOAD NOW**
steelseri.es/gg

PRODUCT OVERVIEW

*Find accessories and replacement parts at steelseries.com/gaming-accessories
For replacement part instructions please visit support.steelseries.com


HEADSET

- 1 Retractable ClearCast Microphone
- 2 Premium Leatherette Ear Cushions*
- 3 Elastic Headband
- 4 3.5 mm Audio Jack
- 5 Volume/Control Wheel
- 6 Microphone Mute Button
- 7 Removable Speaker Plates*
- 8 Mobile Charging Jack (Below the Speaker Plate)
- 9 Power Button
- 10 Swappable Battery (Below the Speaker Plate)
- 11 Bluetooth Button
- 12 Bluetooth LED Indicator
- 13 Power LED Indicator

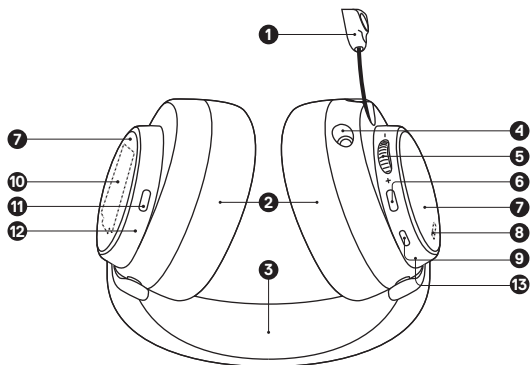


ACCESSORIES*

- 14 USB-C to USB-A Cable
- 15 Lithium-Ion Battery (x2)

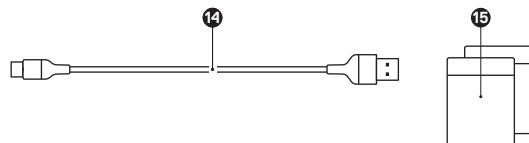

WIRELESS BASE STATION


- 16 OLED Screen
- 17 Secondary Button
- 18 Control Wheel
- 19 Battery Charging Slot
- 20 Line-Out Jack
- 21 Line-In Jack
- 22 USB 1 Jack
- 23 USB 2 Jack

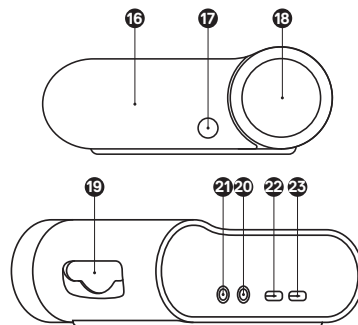

SETUP

CONNECTIONS


Plug the **USB-C to USB-A Cable (14)** into the **USB 1 Jack (22)**, and connect the other end to your PC or console. Optionally connect a second **USB-C to USB-A Cable (14)** from the Base Station's **USB 1 Jack (22)** to a second PC or console. Change input sources via the **OLED Screen (16)** menu.

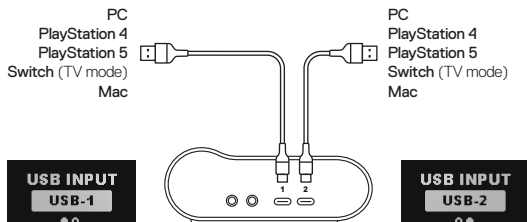

FUNCTIONS


BASE STATION CHARGING

To charge the second **USB-C to USB-A Cable (14)** place it in the **Battery Charging Slot (19)** of the base station.

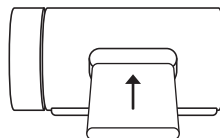


CHANGING BATTERIES

To change the battery, first remove the right-side **Removable Speaker Plates* (7)** by lifting from the groove on the bottom. Then remove the **Swappable Battery (Below the Speaker Plate) (10)** by pushing downward and out to release.

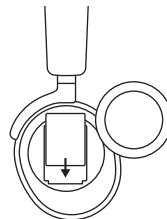

MOBILE CHARGING


The **USB-C to USB-A Cable (14)** can be used to charge the headset while on the go. Remove the left-side **Removable Speaker Plates* (7)**, and connect the cable from the **Mobile Charging Jack (Below the Speaker Plate) (8)** to a USB power source.

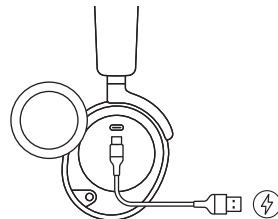

POWER ON/OFF

POWER

To power the headset on or off press and hold the **Power Button (9)** for 1 second.

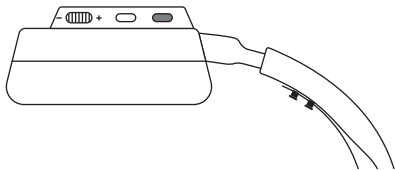

PAIRING

The headset is already paired to the base station when it arrives. In the event you need to re-pair, open the base station menu, and navigate to the following:

Wireless → 2.4G → 2.4G Pairing

Next, while the headset is powered off, hold the power button for 6 seconds until you hear a beep and the light on the headset is flashing rapidly.

BLUETOOTH

BLUETOOTH POWER


Bluetooth can be powered on or off independently of the 2.4G wireless by pressing and holding the **Bluetooth Button (11)** for 1 second

PAIRING

With Bluetooth off, press and hold the **Bluetooth Button (11)** for 4 seconds.

CONTROL

-  Answer/End Voice Call
Single · press the **Bluetooth Button (11)**
-  Play/Pause Music
Single · press the **Bluetooth Button (11)**
-  Skip Track
Double ·· press the **Bluetooth Button (11)**
-  Previous Track
Triple ··· press the **Bluetooth Button (11)**

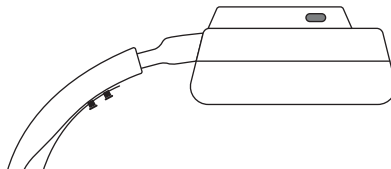

BASE STATION OPERATION

HOME SCREEN

- 1 Press and release the **Control Wheel (18)** or the Headset's **Volume/Control Wheel (5)** to toggle between Volume and ChatMix (PC only, requires software install).



- 2 Rotate the **Control Wheel (18)** or the Headset's **Volume/Control Wheel (5)** to adjust the selected parameter.



- 3 Press and hold the **Control Wheel (18)** or the Headset's **Volume/Control Wheel (5)** to bring up the main menu.



MAIN MENU

- 1 Rotate the **Control Wheel (18)** or the Headset's **Volume/Control Wheel (5)** to cycle menu items.



- 2 Press and release the **Control Wheel (18)** or the Headset's **Volume/Control Wheel (5)** to select.



- 3 Press and release the **Secondary Button (17)** or the Headset's **Power Button (9)** to move back in the menu.



AUDIO OPTIONS

SURROUND

Toggle Software Surround Sound On/Off (PC only, requires software install)



EQUALIZER

Customize your sound with included presets or fully adjustable 10-band EQ



GAIN

Changes the maximum output level of the GameDAC



SIDETONE

Select the amount of your own voice you wish to hear in the headphones



MIC VOLUME

Optimize the level of the microphone for your system




AUDIO OUTPUT SETTINGS

SPEAKERS

Play game and chat audio through a pair of external speakers.


- 1 Connect a 3.5mm cable (not included) from the Base Station's **Line-Out Jack (20)** to your speakers.
- 2 In the **OLED Screen (16)** Menu set the Line Out option to 'Speakers'.

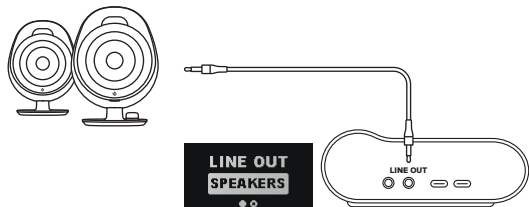

STREAM

Mix your Main, Aux, and Mic audio together to send to a PC for streaming.

- 1 Connect a 3.5mm cable (not included) from the Base Station's **Line-Out Jack (20)** to your stream PC's Soundcard input.
- 2 In the **OLED Screen (16)** Menu set the Line Out option to 'Stream'.
- 3 Adjust your custom mix via the Stream Mixer on the **OLED Screen (16)**.

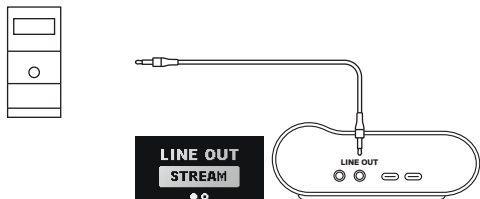


ACTIVE NOISE CANCELLATION

ANC

To toggle ANC on/off, single press the Headset's **Power Button (9)**.

TRANSPARENCY


To enable transparency mode, double press the Headset's **Power Button (9)**.

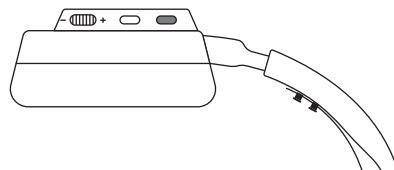

MICROPHONE

RETRACTABLE MICROPHONE


Out of the box, the **Retractable ClearCast Microphone (1)** is retracted. To use the microphone, slide it away from the headset until it reaches full extension.

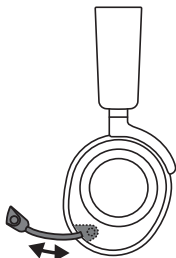

POSITIONING

Position the **Retractable ClearCast Microphone (1)** close to the corner of your mouth with the front surface facing you.


Note: The microphone should not be used when retracted.

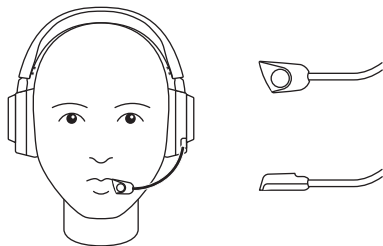

PERFECT FIT


EARCUP ADJUSTMENT

Slide the Earcups up or down to change the overall height.

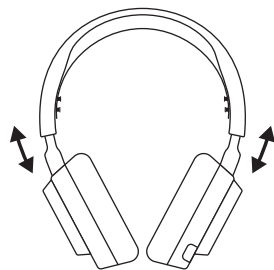

HEADBAND ADJUSTMENT

Change the position of the **Elastic Headband (3)** on one or both sides to achieve the desired tension and flex.

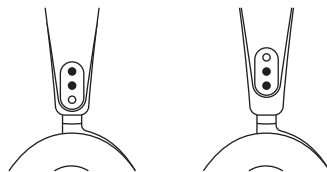

SPEAKER PLATES

The **Removable Speaker Plates* (7)** are attached with magnets. To remove for replacement, place your fingernail in the groove at the bottom of the plate and gently lift.

